

HORSE TRAILER COVERSINSTALLATION + MAINTENANCE

PREPPING FOR INSTALLATION:

- **A.** Ensure that you have purchased the correct size cover for your trailer. Visit ADCOprod.com to review sizing. Measure your trailer from end to end including bumpers spare tire and ladder, excluding hitch (where applicable). If you have any doubts, call ADCO at (800) 541-2326 to speak with our customer service team.
- **B.** Clean your trailer thoroughly and let it dry. Otherwise, you run the risk of black streaks and/or rusting.
- **C.** Pad all sharp edges on the trailer.

INSTALLATION:

- 1. Unroll the cover adjacent to your trailer. Unwind the straps and buckles.
- **2.** Turn the cover inside out while it's on the ground.
- **3.** Roll it back up loosely so that the FRONT tag is the first part that's rolled up and the rear is the loose end.
- **4.** Grab the loose end of the rolled cover and climb the ladder.
- **5.** Turn around from the roof and pull the cover up onto the roof (like you are pulling up a fire hose).
- **6.** Walk the cover to the front of the RV, Front tag still in hand. Toss the front of the cover towards the ground.
- **7.** Begin spreading out the cover over the top of the RV. If it was properly turned inside out, the sides should almost fall into place.
- **8.** Ensure that the sides fall most of the way to the ground far enough to where you can grab them once standing on the ground.
- **9.** Begin your decent down the ladder, installing the ladder cap on your way then pull down the cover over the back of the coach.

Begin your decent down the ladder, installinag the ladder cap on your way – then pull down the cover over the back of the coach.

- **10.** Before any bottom corners are secured, straighten out the cover on the coach so that it's centered properly. Only then should you secure the bottom corners. Once they are in place, do not make further adjustments or pull the fabric or you risk tearing the cover.
- 11. Tighten the Slip-Seam straps and buckles which run front to rear. There are two sets of straps and buckles on each side of the RV cover. One located on the top and the other located on the bottom.
- 12. Tighten the Slip-Seam straps and buckles which run side to side located on both the front and rear of the cover. There are two sets of straps and buckles on each side of the RV cover. One located on the top and the other located on the bottom.
- **13.** Adjust the cinching straps and buckles located at the front and rear of the RV Cover. There are two sets of straps and buckles on each the front and the rear.
- **14.** Finally, secure the bottom Toss-Under straps and buckles located on the bottom sides of the cover. Use the weighted Toss-Under buckles to help toss the straps beneath the coach. Cover straps should be moderately tight. Do not over tighten.

